


Quick Card


Step 1: Assign the Option in StrataSync (Cloud)

An account administrator must first push the license to the specific meter's serial number.

1. Open a web browser and log in to the StrataSync Portal.
2. Navigate to **Assets** and select **Asset List**.

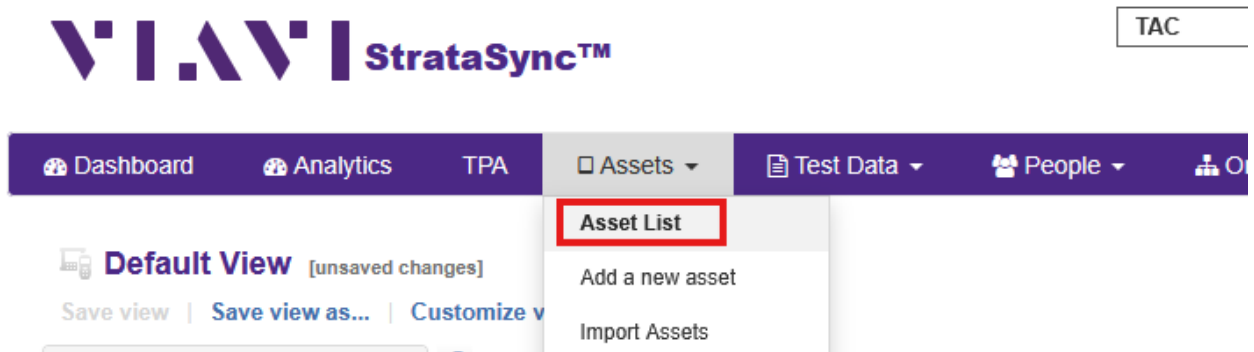

3. Locate and select the checkbox next to the specific [ONX620](#) unit.
4. Click on the **Actions** menu, then select **Options** (or *Floating Options* depending on your license type)

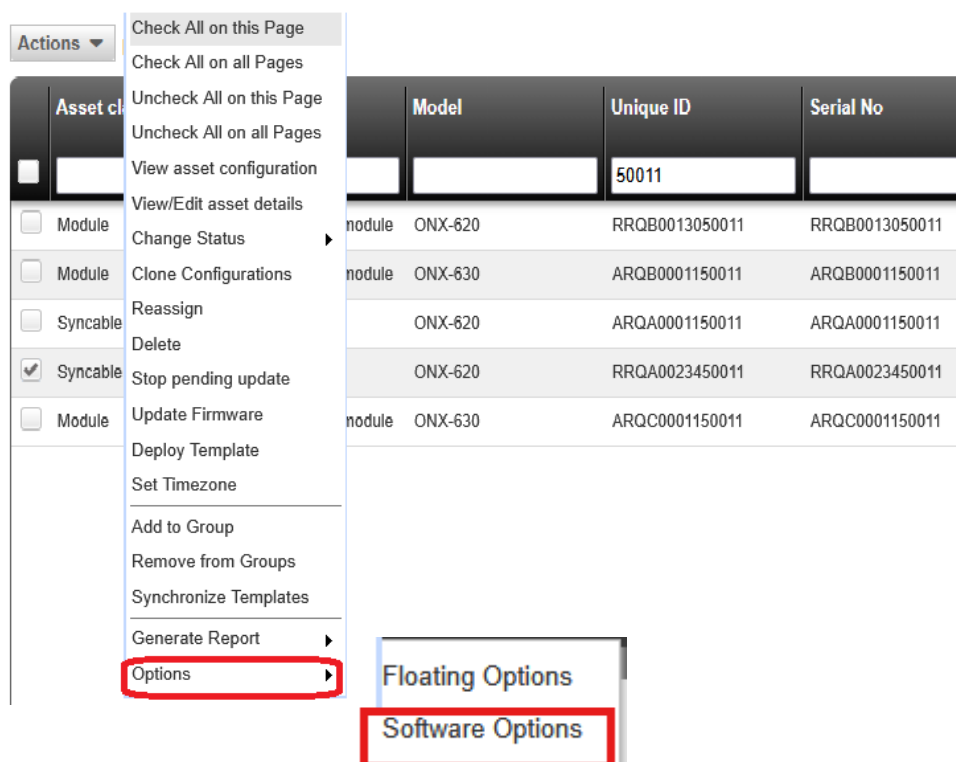

5. Check the **Assign** box next to the desired software option/license and click **Deploy**. [1](#) [2](#)

ASSIGN SOFTWARE OPTIONS - ONX-620 - UID: RRQA0023450011

Please select options to deploy and press next


Option	Type	Description	Organization Name	Available	Assign	Option Expiration Date
Field View with RSG	TIMED	ONX Field View with RSG	Apollo Beta	986 of 1000	☐	
Field View with RSG	PERMANENT	ONX option to enable Field View with RSG	Apollo Beta	378 of 500	☐	
Field View with RSG (De...	TIMED	Demo License of ONX Field View with RSG	Apollo Beta	1076 of 1...	☐	
HL Leakage	PERMANENT	ONX option to enable HL leakage	Apollo Beta	375 of 520	☒	

Step 2: Synchronize the [ONX620](#) (Physical Meter)

Once the option is deployed in the cloud, you must run a physical sync from the meter.


Crucial Note: License additions and firmware updates cannot be processed over RF or Wi-Fi connections; the [ONX620](#) **must use a hardwired Ethernet connection** to pull down licenses.

1. Connect an active **Ethernet cable** from a router or gateway with internet access into Port 1 or Port 2 on the side of the [ONX620](#).
- 2.

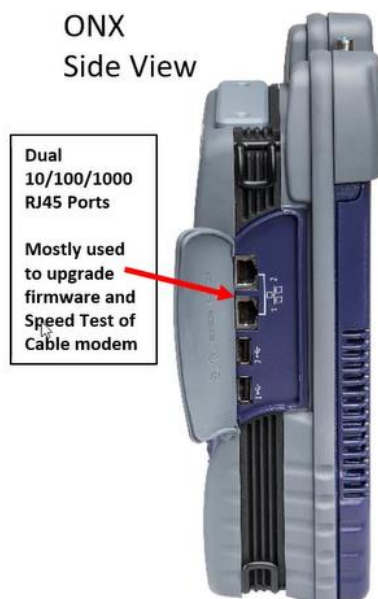


3. Plug the meter into an external **electrical power supply** (do not rely solely on the battery during updates).

- Turn on the meter. From the Home screen, navigate to **CATV → Connection** and verify that it reads "**Ethernet Connection Active**" and has acquired a valid IP address.

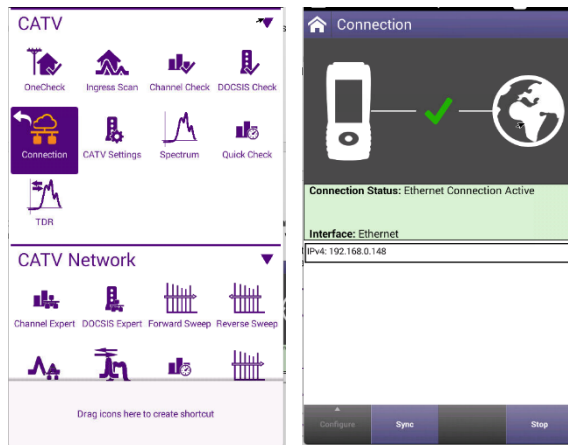

- Press the **Home** key, scroll down, and go to **SYSTEM → StrataSync**.
- Ensure your **Account ID** is correct and the server address is set to `stratasync.viavisolutions.com`.

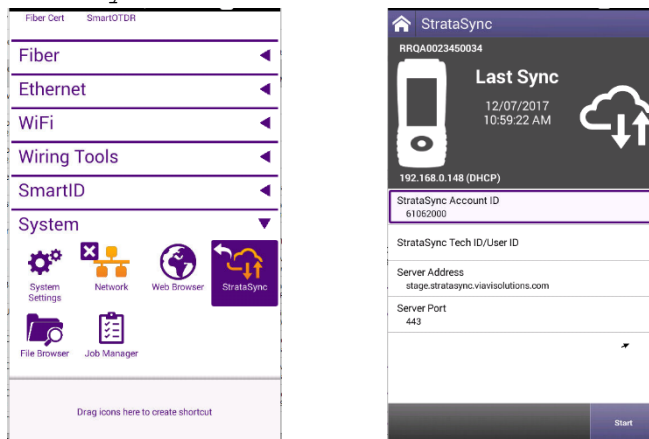

- Press the **Start** soft key to initiate the synchronization.
- The meter will communicate with the server, find the pending option deployment, and download the license profile.

Step 3: Activate the License

- Once the synchronization is successfully completed, **reboot the [ONX620](#) instrument**.
- After restarting, the new feature will be unlocked and ready for use in the field