

QUICK CARD

How to Create a PDF Report from the INX

This document outlines how to create a PDF report from the VIAVI INX-760 when there is no USB support. If the user has USB access on a PC, simply plug the INX into the PC via a USB cable and import the saved results

Equipment Requirements:

- VIAVI INX-760
 - FW version 1.24 or higher
 - <https://inx700.updatemyunit.net/>
- VIAVI Mobile Tech App (VMT)
 - FW version 5.5 or higher
 - Available on the App/Play Store
- VIAVI ReportPro SW install on a PC (windows based)
 - SW version 1.2.1 or higher
 - <https://reportpro.updatemyunit.net/>



ReportPRO Software


NOTE:

This guide assumes there are saved results already on the INX-760 Probe Microscope.

QUICK CARD

MOBILE APPLICATION DOWNLOAD

STEP 1: From Google Play Store or Apple App Store, download VIAVI Mobile Tech App (searching for “VIAVI Mobile Tech”)

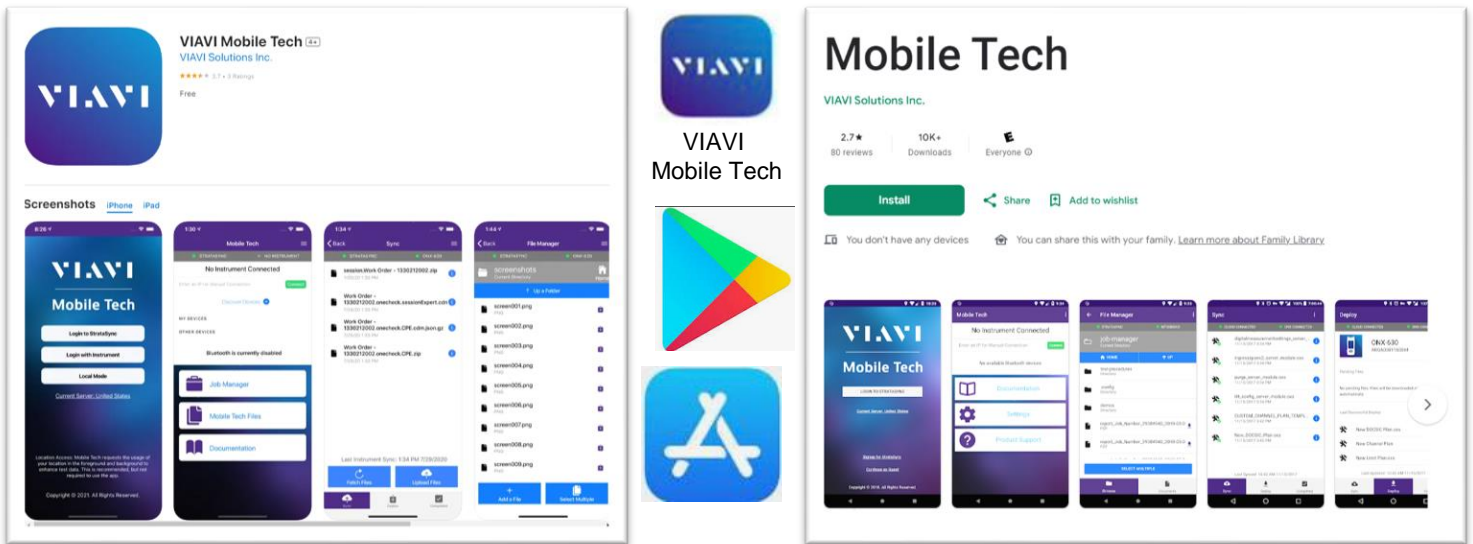

PC APPLICATION DOWNLOAD

STEP 1: Download and install the VIAVI ReportPro Software
<https://reportpro.updatemyunit.net/>



QUICK CARD

PREPARING THE INX FOR BLUETOOTH (ONE TIME)

STEP 1: Press and hold the Power button for two (2) seconds.


Note the following sequence:

The charging LED light turns blue, and the Initializing screen appears after a few seconds.

The Home screen appears on the touchscreen after the initialization process is completed.



TURNING ON BT AND Wi-Fi (One Time Only)

STEP 2: Press  to access the setup menu


STEP 3: Select  System Settings

STEP 4: Select  WiFi & Bluetooth: On



STEP 5: Turn ON Wi-Fi and Bluetooth

STEP 6: Optional – Change the scope Auto off as needed



STEP 7: Validate the Time and Date are accurate and adjust as needed

STEP 8: Press the back arrow or pull the trigger to return to the inspection screen



QUICK CARD

MOBILE TECH CONNECTION TO THE VIAVI INX-xxx PROBE

STEP 1: Open VIAVI Mobile Tech (VMT) on the phone/tablet


STEP 2: Select “LOCAL MODE” if prompted

STEP 3: Allow VMT to find the INX-xxx via Bluetooth and choose CONNECT

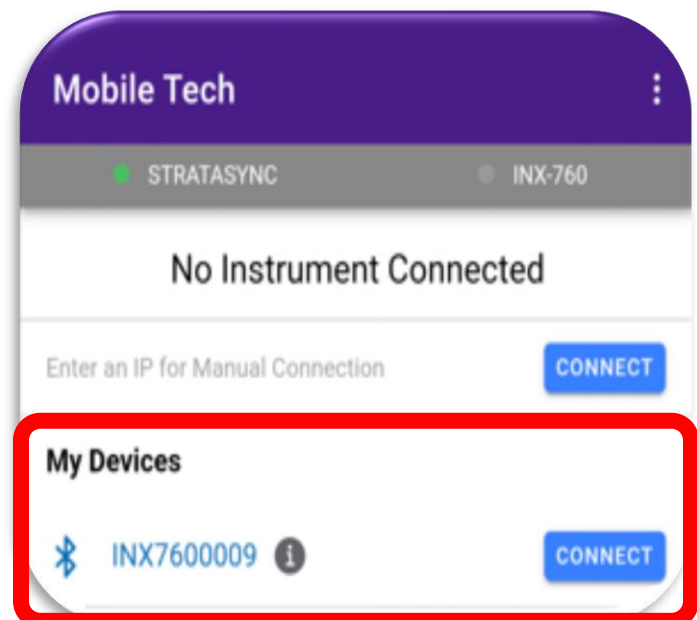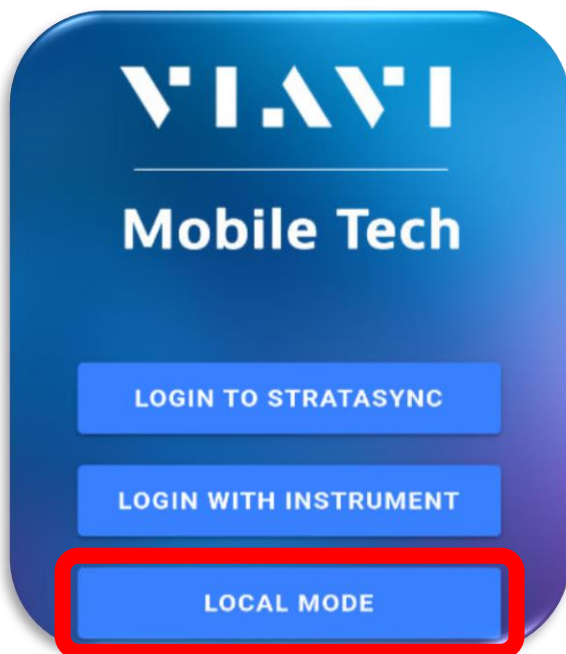

NOTE:

iOS users will need to select “Join” when prompted.

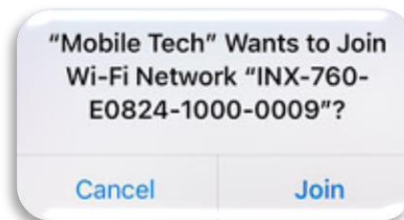


QUICK CARD

SAVING FILES OFF THE INX-xxx

STEP 1: Select the INX-760 Files Icon

STEP 2: Select the Folder with saved results



STEP 3: Select the result and press
NOTE: use the  if needed

STEP 4: Select  Share

STEP 5: Select an application on the mobile to share the file(s)

i.e. Google Drive, OneDrive, Email, etc..

STEP 6: Send the file.

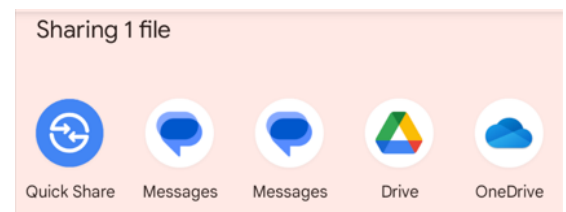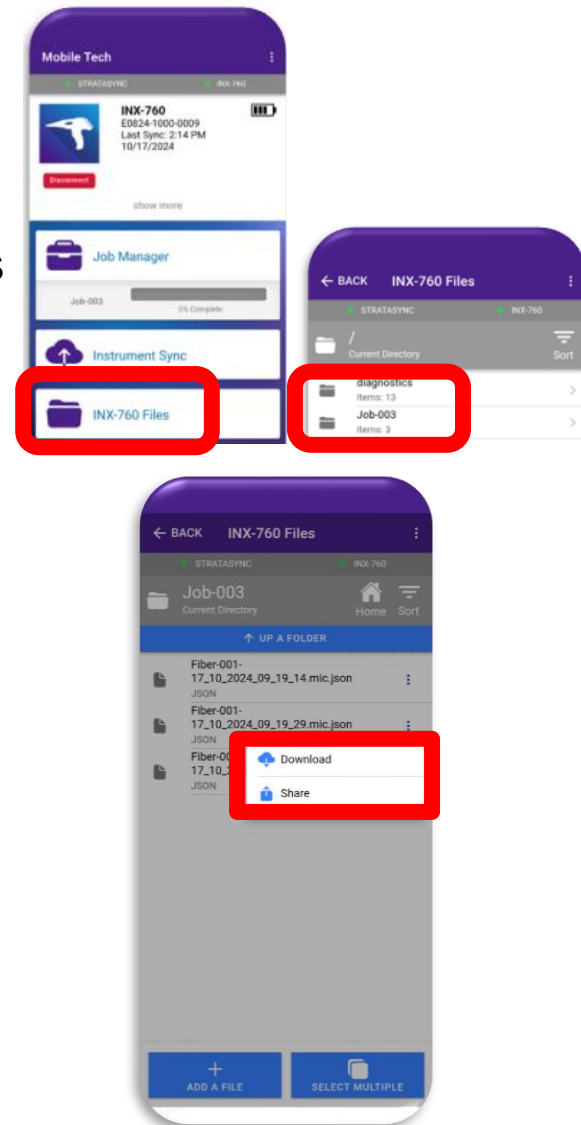

QUICK CARD

OPEN THE RESULTS IN REPORTPRO

STEP 1: Save the INX results to a PC or open the “drive” used in the mobile app

STEP 2: Launch the ReportPro App on a PC

STEP 3: Create a Project on ReportPro by clicking on the 



STEP 4: Name the Project and select save



STEP 5: Select the Import Results 



STEP 6: Open the file location of the INX results (Google Drive, OneDrive, etc..) and the results will import to the ReportPro

STEP 7: Select OK to close the import screen

Importing files

Progress 1 of 0 Completed

Successful 0

Error Duplicate 1

Error Content 0

Completed

Cancel

Ok


QUICK CARD

CREATE A PDF REPORT

STEP 1: Select the File(s) for a report

STEP 2: On the tool bar, select “Reports”

STEP 3: Select “Detailed Report (PDF)”

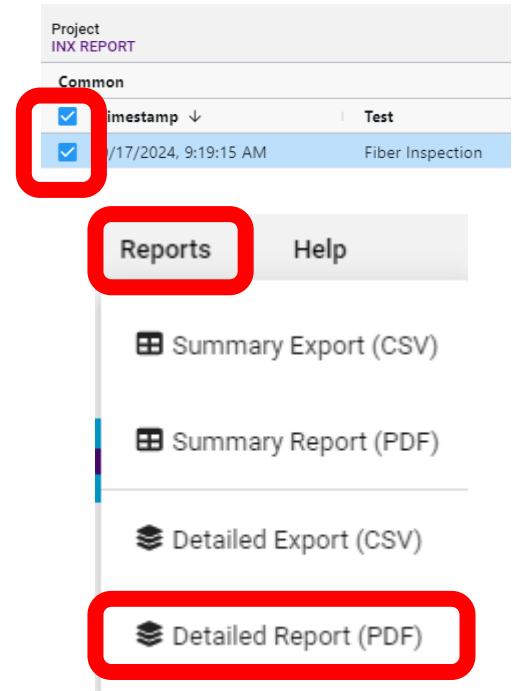

STEP 4: Save the Report.

