

QUICK CARD

How to upgrade the INX using the USB-C port

This document outlines how to locate and download available upgrade files for the VIAVI INX-700/600 using USB-C port. If the user has USB access on a PC, Download latest Firmware to USB-C drive connect to INX and select Upgrade

Equipment Requirements:

- VIAVI INX-760
 - FW version 1.24 or higher
- Internet Connected Device Windows/IOS
 - <https://inx700.updatemyunit.net/>
- Flash drive - USB-C or USB-A with adapter





VIAVI / *UPDATE MY UNIT*

Upgrading the INX 700/600 using USB-C

QUICK CARD

Locating Latest Firmware

STEP 1: From internet connected device using an internet browser access Updatemyunit.net. [Update My Unit | VIAVI Solutions Inc.](https://updatemyunit.net)

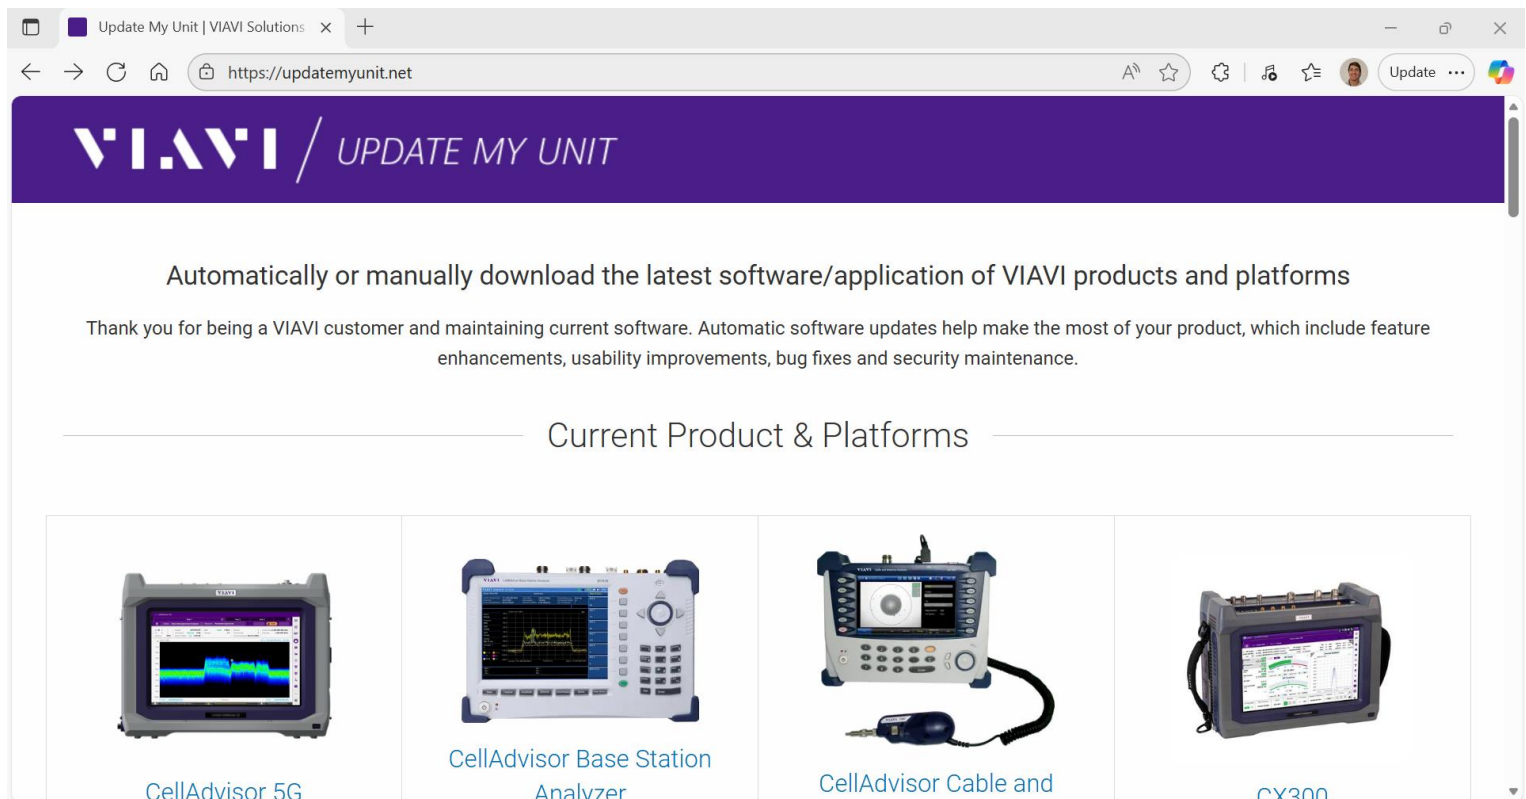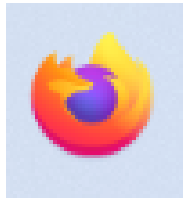

The screenshot shows a web browser window with the address bar displaying "https://updatemyunit.net". The page has a purple header with the "VIAVI / UPDATE MY UNIT" logo. Below the header, the text reads: "Automatically or manually download the latest software/application of VIAVI products and platforms". A thank you message follows: "Thank you for being a VIAVI customer and maintaining current software. Automatic software updates help make the most of your product, which include feature enhancements, usability improvements, bug fixes and security maintenance." A section titled "Current Product & Platforms" contains four product images with labels: "CellAdvisor 5G", "CellAdvisor Base Station Analyzer", "CellAdvisor Cable and", and "CX300".

Upgrading the INX 700/600 using USB-C

QUICK CARD

STEP 2: Scroll down the page until you locate the image of the INX 700 and 600 Series icon and Select it.


STEP 3: Select the Latest available Firmware from the page to download.

LATEST VERSION OF INX 700 AND 600 SERIES FIRMWARE




INX 700 and 600 Series
Microscope

STEP 4: Upon download select the downloaded file from your browsers download folder and open the file

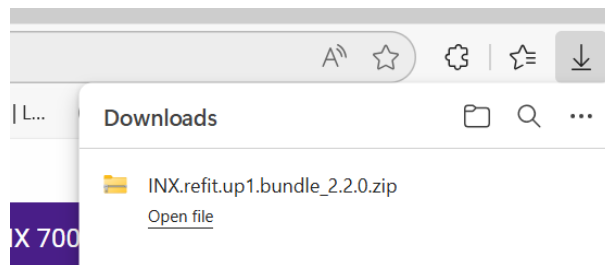


STEP 5: Insert the USB drive into your device, Move the downloaded file to the USB flash drive and place it on the root of the drive. Do not unzip the file

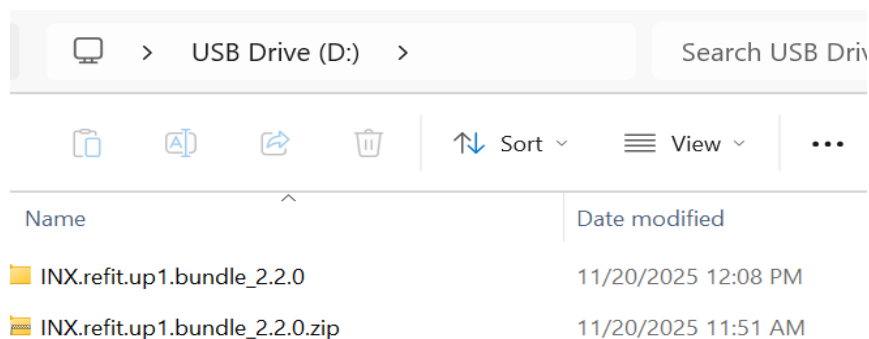


QUICK CARD

STEP 6: Once the extraction is complete, Eject the flash drive safely.

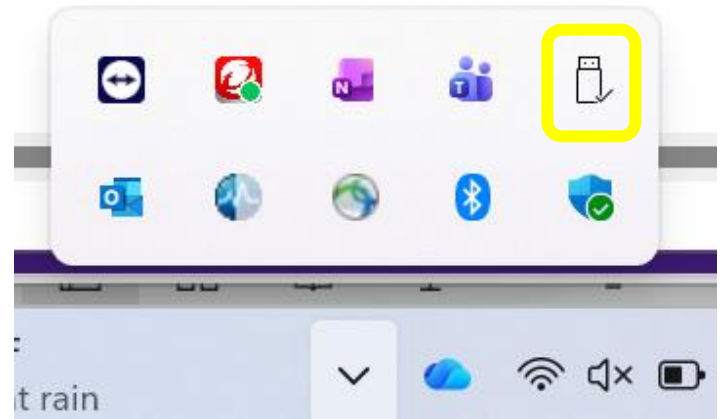

STEP 7: Power on the INX, Insert the flash drive into the INX Probes USB-C slot, it will take a moment for the drive to be recognized.

STEP 8: The INX will present a screen presenting options to Upgrade the device, Select the Software upgrade option.

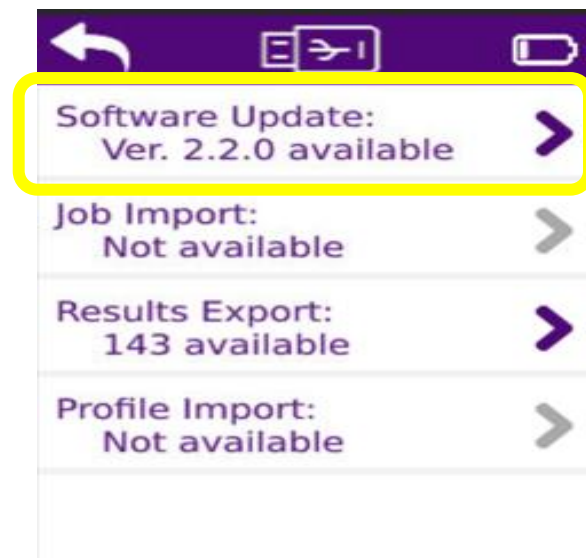

QUICK CARD

STEP 9: The INX will verify you want to upgrade to the available software load. Once selected, screen will display a progress wheel for the upgrade

STEP 10: Once the upgrade is complete the screen will show a success message and will Auto restart. Remove USB upon successful restart.

